

V RANGE SET-UP TOOL

BUCHER
municipal

THE JOHNSTON SET-UP TOOL IS USED TO EFFECTIVELY ASSIST
IN SETTING UP OF ALL V RANGE SWEEPERS.

IT HAS INCORPORATED MEASUREMENTS TO SET-UP...

WIDESWEEP BROOM DOWN PRESSURE PATTERN
SUCTION NOZZLE TO ROAD HEIGHT
GUTTERBROOM REPLACEMENT LENGTH

MAIN BROOM DOWNPRESSURE

THE WIDESWEEP BROOM SHOULD BE SET-UP WITH AN EVEN 2-3"
PATTERN. (SEE PHOTO 1&2) THIS SHOULD BE CHECKED DAILY FOR
OPTIMAL SWEEPING AND TO PREVENT THE BROOM FROM CONING.

SEE THE BELOW PHOTOS ON HOW TO MEASURE
THE WIDESWEEP BROOM PATTERN.

PHOTO 1



PHOTO 2



BUCHER
municipal

V RANGE SET-UP TOOL

BUCHER
municipal

SUCTION NOZZLE TO ROAD HEIGHT

FOR OPTIMAL PICKUP, ADJUST THE FRONT OF THE SUCTION NOZZLE TO 1 1/2" OFF THE GROUND.(PHOTO 3&4) ADJUST THE REAR TO 3/8" OFF THE GROUND.(PHOTO 3&5)

PHOTO 3

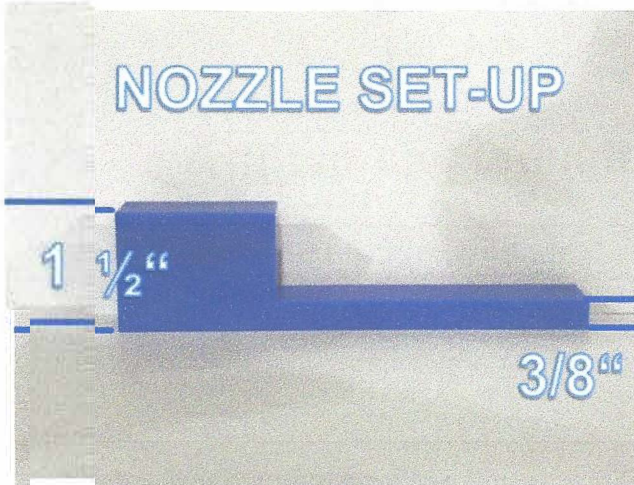


PHOTO 4 (FRONT OF NOZZLE)

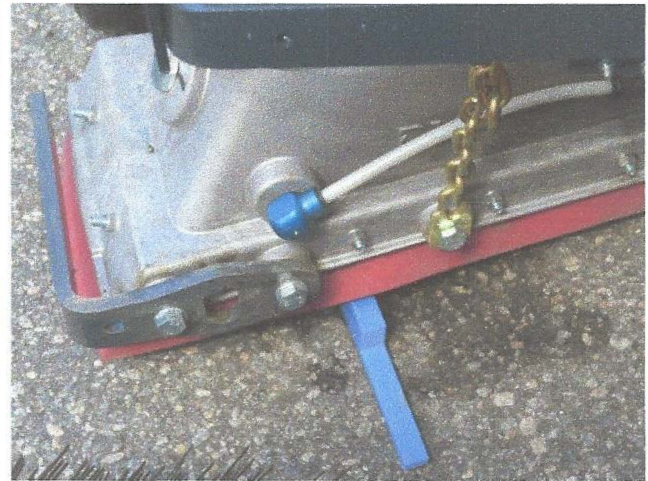


PHOTO 5
REAR OF NOZZLE

GUTTERBROOM REPLACEMENT LENGTH



FOR BEST PERFORMANCE, ONCE THE BRISTLES ARE SHORTER THAN 6" IT IS HIGHLY RECOMMENDED TO REPLACE THE GUTTERBROOM

BUCHER
municipal